

7.5% Tax Change Guide

SPS-300 Register

Turn key to PGM, screen should say PROGRAM MODE

Press "2" for TAX PROGRAMMING

Press "Cash" to move arrow down to TAX TYPE

Enter "1" for Tax Table, then press "Cash"

Enter "1" so FIRST TAX AMOUNT = 0.01 , then press "Cash"

Enter "9" so NON-TAXABLE AMOUNT = 0.09 , then press "Cash"

Enter "1" for # OF NON-REPEAT BREAK, then press "Cash"

Enter "16" for # OF REPEAT BRK, then press "Cash"

Enter the following follow by "CASH" after each:

13
26
40
53
66
80
93
106
120
133
146
160
173
186
209
213
226

Press "Clear" to return to PROGRAM MODE screen